


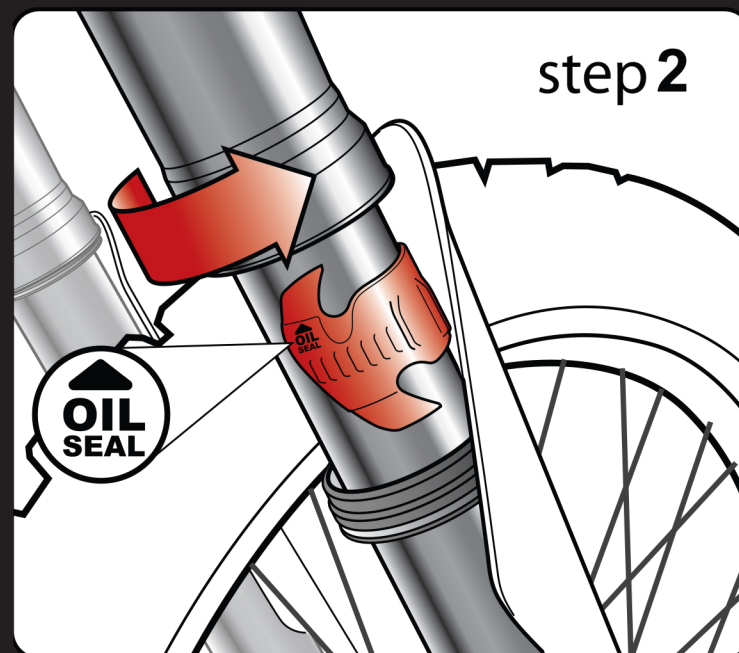
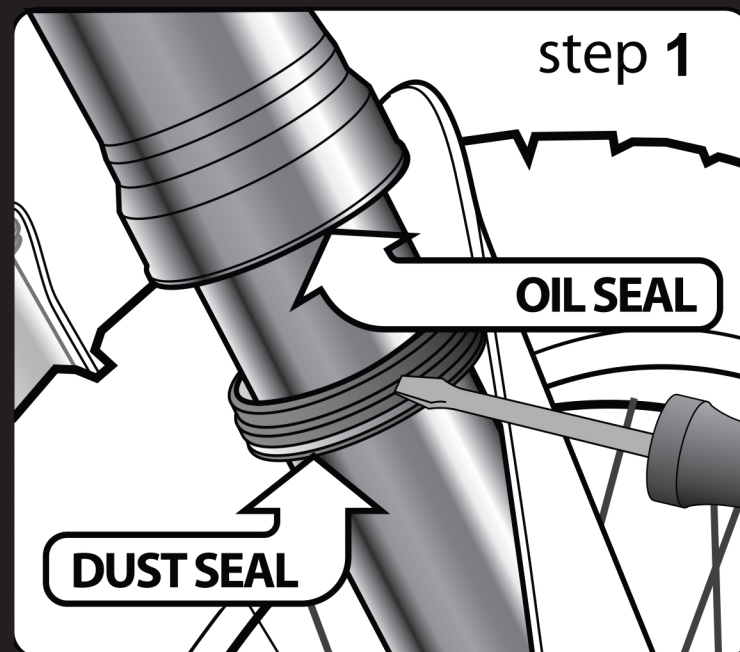


## SEAL DOCTOR

- \* The Seal Doctor removes the dirt that causes leaks for seals, but always check fork leg for scratches, repair if necessary and replace damaged fork seals.

### DIRECTIONS:

- 1 Gently pry the dust seal down using a flat blade screwdriver, taking care not to damage the fork leg. Wipe away any visible dirt or water with a clean cloth.
- 2 Snap the Seal Doctor onto the fork leg with the  symbol towards the oil seal. Slide the cleaning hook gently under the seal lip and rotate a full 360 in the direction shown. Using the lower hook, repeat for the dust seal.
- 3 Wipe the fork leg clean before pressing the dust seal back into position.



Demo videos available online  
[www.riskracing.com](http://www.riskracing.com)