



## **Assembly Instructions**

## FOOT PEDAL ASSEMBLY:

The foot pedal needs to be assembled properly before using the lift. See the images below and follow the instructions. BE CAREFUL TO AVOID PINCH POINTS WITH YOUR FINGERS.

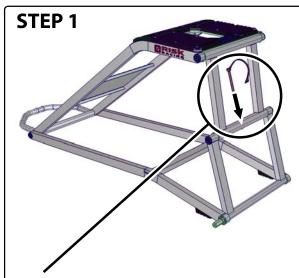


Raise the lift to the position shown above and insert the safety pin provided. This will position the lift in approximately the correct position for the foot pedal assembly.

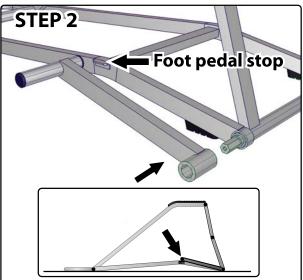

When the lift is locked in place with the safety pin, place the foot pedal on the hex shaft at the angle shown. The end of the foot pedal should rest on the foot pedal stop.



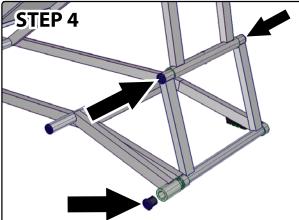

Use a hammer or mallet to install the 3 plastic end cap into the open holes in the lift as shown above. Remove the safety pin and read the instructions on how to properly use the lift. Wrap the safety pin around the upper side bar above the front graphic plate so it doesn't get lost while not in use.

Motocross, motocross related activities and motocross products can be inherently dangerous. Participate in this sport and use these related products at your own risk. Take all precautions to minimize the associated dangers and always use all available safety equipment.

